


OPERATION AND INSTALLATION

Mini remote control

» Mini-FFB

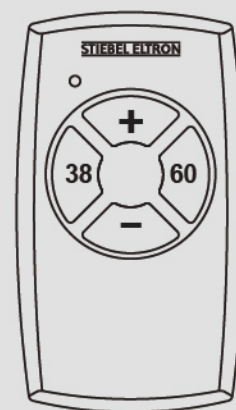

STIEBEL ELTRON

OPERATION


SETTINGS AND DISPLAYS

4.3 Setting the temperature with the mini wireless remote control

The mini wireless remote control allows you to change the temperature setting by wireless control. Encoding prevents the transmitters of third party appliances changing the settings.

The range is affected by potential obstacles between the appliance and the mini wireless remote control.

You can use the mini wireless remote control while showering or bathing.

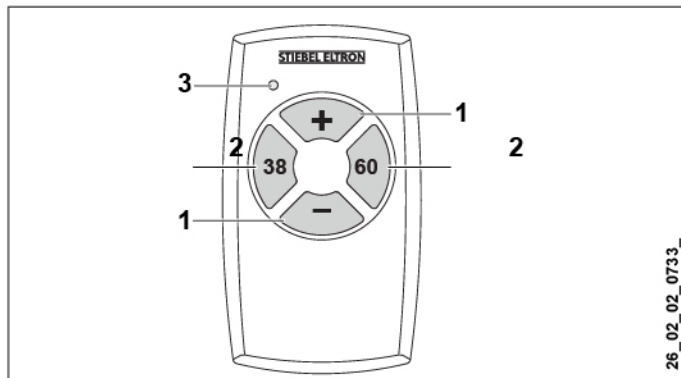

- 1 Keys for temperature setting in steps of 0.5 °C
- 2 Keys for direct temperature selection of 38 °C and 60 °C
- 3 LED

► Operate a key on the mini wireless remote control. This transmits data to the appliance. The red LED confirms that the key information has been transmitted to the appliance.

Changing the battery

The mini wireless remote control is supplied with power by a circular lithium battery. Change the battery when the red LED becomes weak or does not illuminate at all, or when temperature settings are not transmitted to the appliance.



Material losses

► Always remove spent batteries.
Any damage caused by a leaking battery is excluded from any warranty.

- Open the enclosure of the mini wireless remote control, for example by using a suitably sized coin.
- Replace with a CR 2032-type battery. Never install rechargeable NiCd batteries. Ensure correct polarity of the new battery (+ at the top).
- Push the enclosure back together. Ensure that the all-round gasket is not damaged.




Disposing of the battery

Never dispose of batteries with domestic waste. Spent batteries may contain hazardous substances that can be detrimental to the environment and human health. Dispose of batteries through your dealer or via a central recycling point for special waste.

6. Troubleshooting


Fault	Cause	► Remedy
This appliance does not respond; the red LED on the mini wireless remote control is only faintly illuminated or does not illuminate at all.	The battery in the mini wireless remote control is too weak.	Change the battery in the mini wireless remote control.
The LED on the mini wireless remote control illuminates but the appliance does not respond.	The mini wireless remote control is not registered at the appliance.	Arrange for your contractor to register the mini wireless remote control again at the appliance.

If you cannot remedy the fault, notify your heating contractor. To facilitate and speed up your enquiry, please provide the serial number from the type plate (000000-0000-000000):

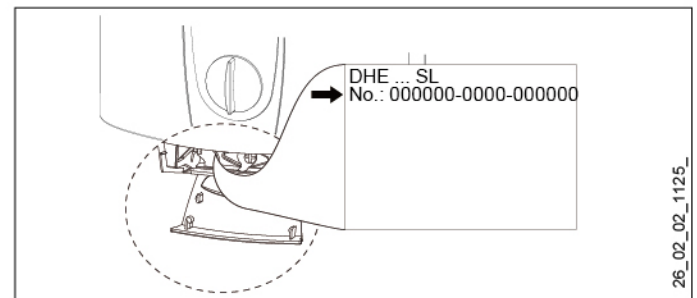

17. Specification

Wireless mini remote control

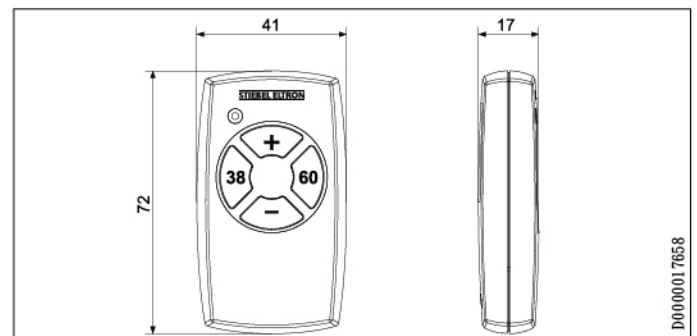

17.7 Data table

		Mini wireless remote control
Application limits		
Temperature setting range	°C	20-60
Radio frequency	MHz	868.3
Range inside a building incl. separating ceiling, approx.	m	25
Versions		
IP rating	Shower	IP X5
	Bath	IP X7
Battery	Type	CR 2032
Dimensions		
Height	mm	72
Width	mm	41
Depth	mm	17
Weight		
Weight excluding wall mounting bracket	g	30